

# "Creations"

by ALNO, INC.

## GANG ATTACHMENT KIT INSTRUCTION SHEET

### MODEL MC4250

Thank you for buying Alno's MC4250 "gangable" kit.

This kit is designed to help you gang together multiple Alno medicine cabinets.

Using this Gang Kit requires the following modifications from the normal cabinet installation:

1. Do not use mounting screws provided with the cabinet, use mounting screws provided with this kit.
2. Surface mount kits are provided with side mirrors. These should be set aside and attached after all cabinets have been installed. Excess mirrors must be properly discarded.
3. Attach the doors after cabinet bodies are all installed.
4. Install the bumpers after the plastic trim is installed.

In order to minimize the gap between doors, you must first establish which type of hinge you have. See Figure 1.

By following these instructions, and adjusting the door hinges carefully, the "gap" between mirrors can be expected to be:

125 degree Hinge Models 1/4"

170 degree Hinge Models 1/8" to 1/16" (the use of different spacers is required)

NOTE: For easy installation on all models below, it is recommended to leave door and rubber bumpers off until cabinets are installed.

Kit includes:  
 "A", "B" and "C" size spacers  
 25" and 35" Vinyl trim  
 4 - 1 1/4" mounting screws


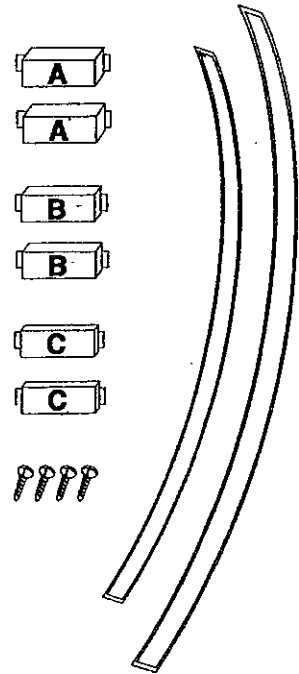


Fig. 1 125 Degree Hinge

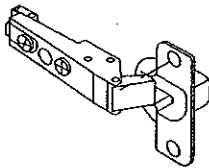

170 Degree Hinge

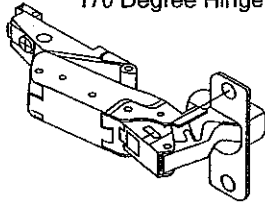


Fig. 2




Fig. 5 For 170 degree hinge

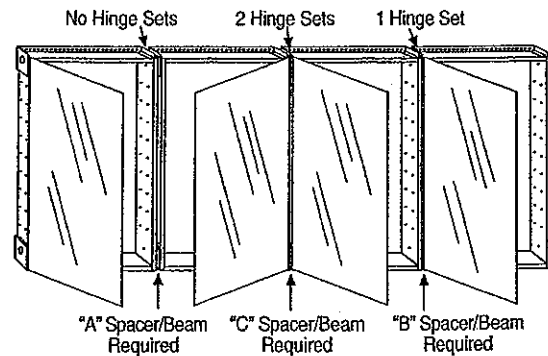


Fig. 3

125 degree hinge

This screw is for left & right adjustment.


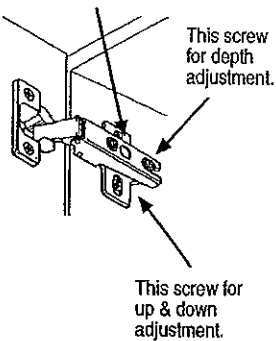


Fig. 4 Framing for 2 cabinets

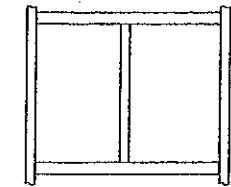

Framing for 3 or more cabinets


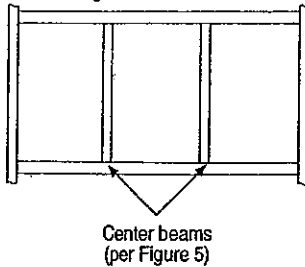


Fig. 6 170 degree hinge

This screw is for left & right adjustment.

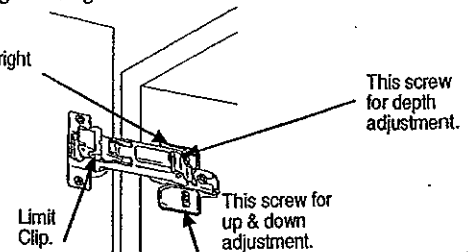

"Creations"  
 by ALNO, INC.

P.O. Box 3249, 9725 Owensmouth Avenue, Chatsworth, CA 91311  
 818-882-6028 • FAX 818-700-1540

72-327-01