


Model Number: 030TM7, 130TM7, 230TM7
330TM7, 430TM7

Tools:

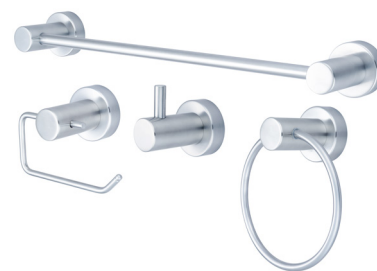


Power Drill Philips ScrewDriver Tape Measure Level Rags




Installation Steps:


Bathroom Hardware

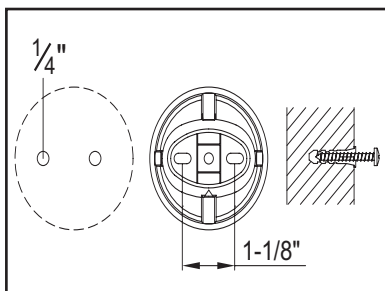

(1) Determine the installation location for the bathroom hardware. Drill 1/4" diameter hole approximate 1-1/8" apart. Place plastic anchors into the drilled holes, use hammer to tap it in flush with the wall. Place the mounting plate and secure them to the wall with the help of mounting screws.

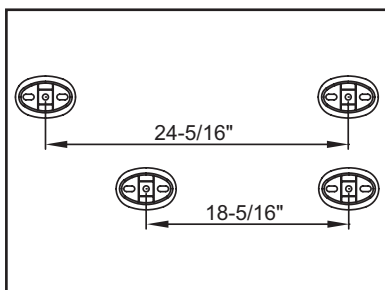

(2) For 7MT030 & 7MT031 Install the mounting plate 24-5/16" & 18-5/16" apart respectively.

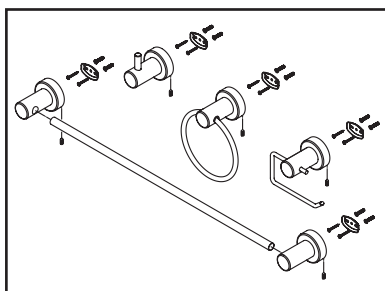

(3) Secure the bathroom hardware with the screw at the bottom. Do not overtighten.